

Operating manual

Heidi Back 2.0



Operating manual 22/07/2024

Version: 7.0

LEGAL NOTICES

Owner and publisher

AUSTROFLAMM GMBH Austroflamm-Platz 1 A- 4631 Krenglbach Tel: +43 (0) 7249 / 46 443 www.austroflamm.com info@austroflamm.com

Edited by: Olivera Stojanovic Illustrations: Konstruktion

Text: Technical department (Austroflamm)

Copyright

All Rights reserved. The contents of these instructions may be reproduced or distributed only with the consent of the publisher! Printing, spelling and typographical errors reserved.

The information in this document is subject to change without prior notice and should not be construed as a commitment by Austroflamm GmbH. Austroflamm GmbH assumes no responsibility for any errors that may appear in this document.

Contents

1	Genera	information	6				
	1.1	Copyright	6				
	1.2	Information about the document	6				
2	Purpose	of the manual	7				
	2.1	Storing the manual	7				
	2.2	Structure of the manual	7				
	2.3	Representations used	7				
	2.4	Version control	7				
	2.5	Abbreviations	8				
3	Safety		9				
	3.1	Importance of the safety instructions	9				
	3.2	General safety instructions	9				
	3.3	Special types of danger and personal protective equipment	10				
4	Product	overview	11				
	4.1	Intended use	11				
	4.2	Identification of the product	11				
	4.3	Energy label	12				
	4.4	Positioning of the nameplates	13				
5	Technical data						
	5.1						
	5.2	Heidi Back 2.0 general specifications	17				
	5.3	Heidi Back 2.0 with 100 mm pipe, general specifications	18				
6	Transpo	ort, handling and storage	19				
	6.1	Transportation	19				
	6.2	Storage	19				
7	Require	ments at the installation location	20				
	7.1	Safety distances to be observed	20				
	7.2	Combustion air	21				
	7.3	Chimney requirements	21				
	7.4	Floor load-bearing capacity	21				
	7.5	Floor condition	21				
	7.6	Room of installation	21				
8	Fuel ma	terial/-quantity	22				
	8.1	Fuel	22				
	8.2	Fuel quantity	24				
9	Installat	ion	25				
	9.1	Execution					
	9.1.1	Mounting the hob.					
	9.1.2 9.1.3	Rearranging the flue pipe connection					
		5					

	9.1.4 9.1.5	Mounting the KeramottInstalling the log drawer					
	9.1.6	Removing the front trim	. 35				
10	Air+ ins	tallation and operation	. 36				
	10.1	Removing the rotary control unit	. 36				
	10.2	Attaching the firebox temperature sensor	. 36				
	10.3	Converting the rotary control unit	. 37				
	10.4	Installing the control unit	. 37				
	10.5	Installing the DC plug	. 38				
	10.6	Electrical connection of the controls	. 38				
	10.7	Mounting the cover	. 39				
	10.8	How the "AIR+" automatic combustion control works	. 39				
11	Settings	5	. 41				
	11.1	Door hinges	. 41				
	11.2	Adjusting the firebox door spring	. 42				
	11.3	Adjusting the firebox door lock	. 42				
	11.4	Adjusting the baking compartment door lock	. 43				
	11.5	Ventilation in the baking compartment	. 43				
12	Commis	ssioning	. 44				
	12.1	Initial Commissioning	. 44				
	12.2	Balanced Flue Operation	. 44				
	12.3	Baking compartment door	. 44				
13	Operati	on	. 45				
	13.1	Before heating up	. 45				
	13.2	Making fire correctly	. 45				
	13.3	Heating in the transition period	. 46				
14	Mainter	nance	. 47				
15	Cleanin	g	48				
. •	15.1	Cleaning the stove, flue gas ducts and flue pipe					
	15.2	Cleaning flue gas paths					
	15.3	Emptying the ash box					
	15.4	Cleaning the door window					
	15.5	Cleaning surfaces	. 51				
16	Help		. 52				
	16.1	Firebox lining					
	16.2	What to do in the event of a chimney fire	. 53				
	16.3	What to do in the event of faults	. 53				
17	Accesso	ories	. 54				
18	8 Spare parts 5						
		tling	37 37 38 39 41 42 42 43 44 44 45 45 45 45 45 51 51 51 53 51 53 53 53 53				
	19.1	Removing the side cladding					

20	Disposal	59
21	Guarantee / warranty	61
22	Start up log	62
23	Service Report	63

1 General information

You have decided in favour of an Austroflamm stove.

Congratulations on your decision and thank you for your trust.

Correct operation and care are essential for trouble-free operation and long service life.

The information in this manual is of a general nature. National and European standards, local and building regulations, together with fire regulations must be complied with.

Read these instruction through carefully before installation and operation. No liability or warranty claims apply for damage incurred by failure to follow this manual.

Please observe the instructions in the individual sections.

This manual is a component part of the stove. It includes all the important information for both the dealer and the customer.

Personally hand over this manual to the owner of the stove together with an introduction to the system (heating operations).

In the following list we give you an overview of which sections are important for whom:

Dealer	End customer			
Complete operating manual	General information			
	Purpose of the manual			
	Safety			
	Product overview			
	Technical data			
	Requirements at the installation location			
	Fuel material/-quantity			
	Settings			
	Commissioning			
	Operation			
	Maintenance			
	Cleaning			
	Help			
	Accessories			
	Spare parts			
	Disassembling			
	Disposal			
	Guarantee / warranty			
	Data processing			
	Service Report			

1.1 Copyright

All Rights reserved. The contents of these instructions may be reproduced or distributed only with the consent of the publisher! Printing, spelling and typographical errors reserved.

1.2 Information about the document

The information in this document is subject to change without prior notice and should not be construed as a commitment by Austroflamm GmbH. Austroflamm GmbH assumes no responsibility for any errors that may appear in this document.

2 Purpose of the manual

This manual is a component part of the stove and is intended to contribute to the stove being safely installed and maintained.

TIP

Please read this manual before using the stove for the first time.

2.1 Storing the manual

Store this manual in case you need it. A current version of the manual can be found online at our homepage www.austroflamm.com.

2.2 Structure of the manual

The table of contents can be found on page 3.

Illustrations in this manual may differ from the delivered product.

2.3 Representations used

The following representations are used in this manual:

Steps with mandatory adherence to the sequence

- ✓ Prerequisite
- 1) Step 1
- 2) Step 2
- 3)
 - ⇒ Intermediate result / additional information
- ⇒ Result

Steps and bullet points without mandatory sequence

- ...
-
 -
 -

Cross-references

See Technical Data

Useful tips

TIP

Fuel

Use only the recommended fuel!

2.4 Version control

We update our manuals on a continual basis. The current version can be found at our homepage www.austroflamm.com.

2.5 Abbreviations

Abbreviation	Meaning	
Air+	Automatic combustion control for stoves	
HMS	Heat Memory System	
ST	Stoves	

3 Safety

In this manual we give you numerous safety instructions for the safe operation of your stove. These instructions are characterized differently as follows, depending on their importance:

3.1 Importance of the safety instructions

NOTICE

Particular behaviour and/or activities that are required for safe working. Failure to follow this can result in material damage.

⚠ CAUTION

Possible dangerous situation (light or minor injuries and material damage).

⚠ WARNING

Possibly imminent danger to life and health of persons (severe injuries or death).

⚠ DANGER

Immediately imminent danger to life and health of persons (severe injuries or death).

3.2 General safety instructions

- The information in this manual represents generally applicable standards and rules. For installing/operating a stove, all local regulations including those that relate to national and European standards, as well as emergency service regulations, must be complied with.
- Before operating your stove, carefully read through the entire manual and observe the instructions and warnings.
- Austroflamm GmbH accepts no liability or responsibility for the connection of our heating appliances to shared exhaust pipes/chimneys multiple occupancy. For more information consult a chimney sweep and check your national, regional and local building regulations.
- Only approved transport aids with sufficient load-bearing capacity may be used to transport your stove.
- Caution varnish is not an anti-rust protection!
- Burn only the fuel listed and approved in the section.
- It is strictly forbidden to burn or introduce highly flammable or explosive substances, such as empty aerosols and the like, into the firebox or to store them in the immediate vicinity of your stove due to the risk of explosion.
- No loose or easily flammable items of clothing should be worn when laying the fire.
- Please note that placing non-heat-resistant objects on, or near, the stove is forbidden.
- Do not place any items of laundry on the stove to dry. Laundry racks or the like must be placed at a sufficient distance from the stove. (Fire hazard!)
- This stove is not a slow-burn fire.
- While your stove is in operation, it is forbidden to process highly flammable or explosive substances in the same room or in adjoining rooms.
- The stove must only be operated with the doors closed.
- The door and all the stove's control devices must be closed when the stove is not in operation.

• Please note that the surfaces of this stove heat up considerably during operation. We recommend that you use the protective glove supplied to operate your stove.



• Please alert children to these dangers, and keep them away from the stove when it is operating.

A DANGER

Danger of overheating

To prevent damage you must **NEVER** operate your stove with a greater quantity of fuel than the quantity given in these instructions, either during its initial commissioning or every time you subsequently light it up again!

- Your stove is not suitable for use as a ladder or a stand.
- Waste materials (of any kind) or residues **MUST NOT** be burned in the stove.
- Sharp edges may be created during or after the installation of accessory parts. Please use suitable grinding or cutting tools to remove these sharp edges.
- When working on or with the stove, always wear protective gloves. Example: moving the stove, assembling, disassembling, repairing, attaching accessories, etc.

3.3 Special types of danger and personal protective equipment

For certain activities such as installation/dismantling, particular care must be taken that the following safety equipment is worn:

Safety gloves
Safety shoes

Product overview 4

Intended use 4.1


The Austroflamm stove described in this manual is manufactured and tested with a type A1 self-closing and locking door under EN 13240.

NOTICE

Operation is only permissible with closed/bolted door.

4.2 Identification of the product

In the following illustrations we give an overview of the most important dimensions and the nameplate positioning.

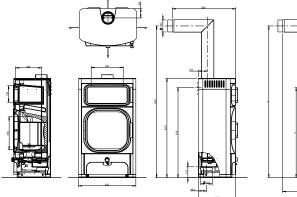

111111111

Fig. 1: Basic appliance dimensions

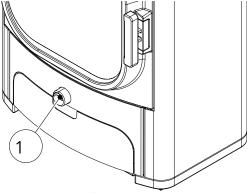


Fig. 2: Air control

- 1) Open (+) and closed (-) convection air controller
- 2) Open (+) and closed (-) primary/secondary air controller

4.3 Energy label

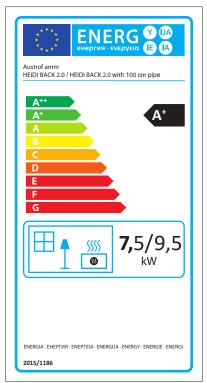


Fig. 3: Energy label

4.4 Positioning of the nameplates

Here we show where you can find the type plate. You received a copy of the type plate with the stove. You can find a copy of the type plate of your stove on the back of the manual you get with your stove.

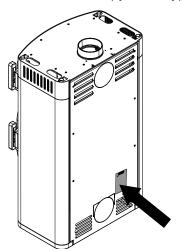


Fig. 4: Nameplate

The nameplate is located on the rear of the stove.

5 Technical data

As a type 1 stove, a connection to a chimney already occupied with other solid-fuel stoves and ovens is possible provided that the chimney rating under DIN 4705 - part 3, does not contravene this.

5.1 Technical data according to Regulation (EU) 2015/1185 and delegated Regulation (EU) 2015/1186

Contact details for the manufacturer or their authorised representative

Manufacturer:	Austroflamm GmbH		
Contact:	-		
Address:	Austroflamm-Platz 1		
	4631 Krenglbach		
	Austria		

Appliance details

Model identification(s):	Heidi Back 2.0 Heidi Back 2.0 with 100 mm pipe
Equivalent models:	-
Test reports:	1880 / 1880-CPR-040-22
	1880 / 1880-CPR-011-23
Applied harmonized standards:	EN 13240:2001/A2:2004/AC:2007
Other standards/technical specifications. Specifications:	-
Indirect heating function:	No
Direct heat output:	7.5 / 9.5 kW
Indirect heat output ¹ :	-

Properties for operation with the preferred fuel

Space heating annual use efficiency η_s :	72.0 / 75.1 %		
Energy efficiency index (EEI):	108 / 113		

Particular precautions for assembly, installation or maintenance

Described in the individual sections of the operating manual.

Fuel	Preferred fuel (only one) ² :	Other suitable fuel(s) ³ :	ηs [x%]:	Space heating emissions at nominal heating efficiency (*)				Space heating emissions at minimum heat output ⁴ (*) (**)			
	(511)			PM	OGC	CO	NOx	PM	OGC	CO	NOx
				[x] m	g/Nm³	(13%	O2) ⁵	[x] mg O2) ⁶	g/Nm³	(13%	, o
Log, moisture content ≤ 25 %	yes	no	72.0/ 75.1	15/ 25	39/ 34	938 / 650	96/ 89	-	-	-	-
Compregnated laminated wood, moisture content < 12 %	no	no	-	-	-	-	-	-	-	-	-
Other woody biomass	no	no	-	-	-	-	-	-	-	-	-
Non-woody biomass	no	no	-	-	-	-	-	-	-	-	-
Anthracite and dry steam coal	no	no	-	-	-	-	-	-	-	-	-
Coking coal	no	no	-	-	-	-	-	-	-	-	-
Semi-coke	no	no	-	-	-	-	-	-	-	-	-
Bituminous coal	no	no	-	-	-	-	-	-	-	-	-
Lignite briquettes	no	no	-	-	-	-	-	-	-	-	-
Peat briquettes	no	no	-	-	-	-	-	-	-	-	-
Briquettes made from a mixture of fossil fuels	no	no	-	-	-	-	-	-	-	-	-
Other fossil fuels	no	no	-	_	-	-	-	-	-	-	-
Briquettes made from mix- ture of biomass and fossil fuels	no	no	-	-	-	-	-	-	-	-	-
Other mixture made of biomass and solid fuels	no	no	-	-	-	-	-	-	-	-	-

^(*) PM = dust, OGC = organic gaseous connections, CO = carbon monoxide, NOx = nitrogen oxide

^(**) Only required when using correction factors F(2) or F(3).

Properties for exclusive operation with the preferred fuels⁷

Specification	Symbol	Value	Unit		Specification	Symbol	Value	Unit	
Heat output				1	Thermal efficiency (fuel efficiency) (based on the N				
Nominal heat efficiency	Pnom	7.5 / 9.5	kW	+	Thermal efficiency (fuel ef- ficiency) at nominal heat efficiency	ηth,nom	82.0 / 85.1	%	
Minimum heat output (standard value)	Pmin	-	kW		Thermal efficiency (fuel ef- ficiency) at minimum heat output (standard value)	ηth,min	-	%	
Auxiliary power co	onsumption	on		-	Type of heat output/room	temperature	control		
At nominal heat efficiency	elmax	-	kW		single-level heat output, no control	room tempe	erature	yes	
At minimum heat output	elmin	-	kW		two or more manually adjustable levels, no room no temperature control			no	
In standby condition	elSB	-	kW		room temperature control with mechanical thermostat			no	
Pilot flame power	requirem	ent			with electronic room tempe	erature contr	ol	no	
Pilot flame power requirement	Ppilot	-	kW		with electronic room temperature control and day- time regulation			no	
(if present)									
					with electronic room tempe weekday regulation	erature contr	ol and	no	
					Other regulation options				
				((multiple selections possible)				
					room temperature control	with presence	e detection	no	
					room temperature control tection	with open wi	ndow de-	no	
				,	with remote control option			no	

¹There is no entry for fireplaces without water-carrying components.

² Values for annual use efficiency and emissions must be given here for the preferred fuel.

³ Values for annual use efficiency and emissions must be given here for all other suitable fuels.

⁴ Corresponds to partial load heat output as per EN 16510

⁵ Specification in mg/m³ for heated filter method (in compliance with Annexe III, number 4, letter a, section i, point 1) or g/kg for measurement in dilution tunnel (in compliance with Annexe III, number 4, letter a, section i, point 2 and 3.)

⁶ Specification mg/m³ for heated filter method (in compliance with Annexe III, number 4, letter a, section i, point 1) or g/kg for measurement in dilution tunnel (in compliance with Annexe III, number 4, letter a, section i, point 2 and 3.)

⁷ Specifications must be made here for the preferred fuel only.

5.2 Heidi Back 2.0 general specifications

Dimensions and weight	
Height [mm]	1074
Width [mm]	620
Depth [mm]	405
Combustion chamber width [mm]	418
Combustion chamber height [mm]	355
Combustion chamber depth [mm]	270
Baking compartment width [mm]	346
Baking compartment height [mm]	178
Baking compartment depth [mm]	283
Warming drawer, width [mm]	-
Warming compartment height [mm]	-
Warming drawer, depth [mm]	-
Dimensions, a (with Austroflamm elbow piece) [mm]	1641
Dimensions, b (with Austroflamm elbow piece) [mm]	974
Dimensions, c (with Austroflamm elbow piece) [mm]	687
Dimensions, d (with Austroflamm elbow piece) [mm]	102
Flue pipe outlet, diameter [mm]	130
Outside air connection diameter [Ø mm]	125
Weight, basic appliance [kg]	168
Weight Xtra [kg]	-
Weight, HMS [kg]	67
Total weight inc. steel case (STM) [kg]	168
Total weight inc. ceramic case (KGM) [kg]	-
Total weight inc. soapstone case (SPM) [kg]	-
dP Radiation front [mm]	1200
dS1 Distance left [mm]	50
dR Distance rear [mm]	50
dS2 Distance right [mm]	50
dB Distance bottom [mm]	0
Minimum distance from non-flammable materials [mm]	50
Output	
Nominal heat efficiency [kW]	7.5
Minimum heat output [kW]	3.5
Maximum heat output [kW]	9.0
Minimum un proportion and a situation of the situation of	0.2

Output	
Nominal heat efficiency [kW]	7.5
Minimum heat output [kW]	3.5
Maximum heat output [kW]	9.0
Minimum room heating capacity [m³]	82
Maximum room heating capacity [m³]	210
Energy efficiency class	A+

Exhaust gas values for the multiple occupancy of the chimney (according to DIN 4705 Part 3) or rating of the chimney (according to DIN 4705 Part 2).

Data for the chimney sweep	
Exhaust gas mass flow [g/s]	6.3
Flue gas temperature [°C]	260
Minimum delivery pressure at nominal heat output [Pa]	12
at 0.8 times nominal heat output [Pa]	10

5.3 Heidi Back 2.0 with 100 mm pipe, general specifications

Dimensions and weight	
Height [mm]	1074
Width [mm]	620
Depth [mm]	405
Combustion chamber width [mm]	418
Combustion chamber height [mm]	355
Combustion chamber depth [mm]	270
Baking compartment width [mm]	346
Baking compartment height [mm]	178
Baking compartment depth [mm]	283
Warming drawer, width [mm]	-
Warming compartment height [mm]	-
Warming drawer, depth [mm]	-
Dimensions, a (with Austroflamm elbow piece) [mm]	1641
Dimensions, b (with Austroflamm elbow piece) [mm]	974
Dimensions, c (with Austroflamm elbow piece) [mm]	687
Dimensions, d (with Austroflamm elbow piece) [mm]	102
Flue pipe outlet, diameter [mm]	130
Outside air connection diameter [Ø mm]	125
Weight, basic appliance [kg]	168
Weight Xtra [kg]	-
Weight, HMS [kg]	67
Total weight inc. steel case (STM) [kg]	168
Total weight inc. ceramic case (KGM) [kg]	-
Total weight inc. soapstone case (SPM) [kg]	-
dP Radiation front [mm]	1200
dS1 Distance left [mm]	200
dR Distance rear [mm]	200
dS2 Distance right [mm]	200
dB Distance bottom [mm]	0
Minimum distance from non-flammable materials [mm]	50

Output	
Nominal heat efficiency [kW]	9.5
Minimum heat output [kW]	5.5
Maximum heat output [kW]	9.5
Minimum room heating capacity [m³]	114
Maximum room heating capacity [m³]	305
Energy efficiency class	A+

Exhaust gas values for the multiple occupancy of the chimney (according to DIN 4705 Part 3) or rating of the chimney (according to DIN 4705 Part 2).

Data for the chimney sweep	
Exhaust gas mass flow [g/s]	7.1
Flue gas temperature [°C]	224
Minimum delivery pressure at nominal heat output [Pa]	12
at 0.8 times nominal heat output [Pa]	10

6 Transport, handling and storage

6.1 Transportation



Fig. 5: Crate

Immediately checked the goods delivered for completeness and damage in transit.

Before installing the stove, check that all movable parts are working. Any defects before the installation of the stove must be reported.

Transport is with a crate. The crate facilitates transport of the stove using a lifting truck or forklift.

Remove the crate and dispose of it appropriately.

6.2 Storage

The stove must be stored in a dry room/warehouse. Protect against dirt, heat and moisture.

The following illustrations are attached to the crate and must be observed:







- Fragile always place upright protect against moisture and store dry.
- Remove and dispose of packing material in an environmentally friendly manner.
- The crate can be disposed of in the separate collection for packaging. Local disposal regulations must be observed.

7 Requirements at the installation location

7.1 Safety distances to be observed


If your floor is made of a combustible material, a non-combustible material must be used as protection in the area in front of the appliance. For more detailed information, please contact an Austroflamm dealer.

NOTICE

A floor protection plate must be used if your floor is made from a combustible material.

Safety distances for combustible objects, such as wooden furniture, upholstered furniture, sofas, etc. must be complied with. In the case of very heat-sensitive objects the distance from the stove must be increased in order to avoid damage from the heat.

Please refer to the table below for the necessary safety distances.

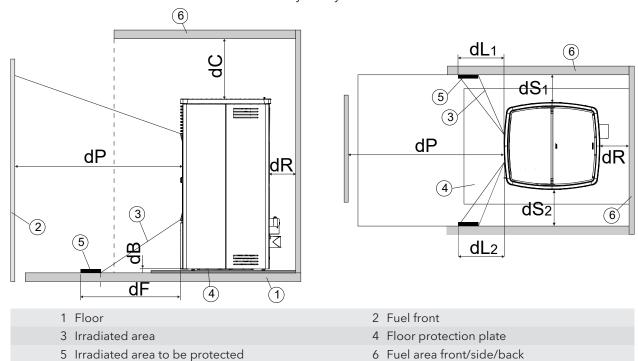

Heidi Back 2.0

	Heidi-Back-2.0
dP Radiation front [mm]	1200
dS1 Distance left [mm]	50
dR Distance rear [mm]	50
dS2 Distance right [mm]	50
dB Distance bottom [mm]	0
dF Radiation to the floor [mm]	under examination
dL 1 Radiation left [mm]	under examination
dL 2 Radiation right [mm]	under examination
dC Distance above [mm]	750
Minimum distance from non-flammable materials [mm]	50

Heidi Back 2.0 100mm tube (only relevant for Italy)

	Heidi Back 2.0 100 mm pipe
dP Radiation front [mm]	1200
dS1 Distance left [mm]	200
dR Distance rear [mm]	200
dS2 Distance right [mm]	200
dB Distance bottom [mm]	0
dF Radiation to the floor [mm]	not applicable
dL 1 Radiation left [mm]	not applicable
dL 2 Radiation right [mm]	not applicable
dC Distance above [mm]	750
Minimum distance from non-flammable materials [mm]	50

7.2 Combustion air

An adequate supply of combustion air must be provided during operation. With a modern very thick building shell it can happen that the combustion air supply is not guaranteed for balanced flue operation or that the draft behaviour is impaired. In this case an adequate supply of combustion air must be provided. Your Austroflamm specialist dealer will be happy to advise you.

TIP

Ensure that combustion air openings are not closed!

7.3 Chimney requirements

When connecting the flue pipes to the chimney, national and/or local safety regulations must be complied with. Your Austroflamm stove is fitted at the factory with a flue pipe outlet at the top (see chapter Technical data). The connection can, as described in these instructions, be rearranged to the bottom. When connecting with other pipe diameters the approval of your responsible chimney sweep is required. The flue pipe connection and flue pipe transitions must be sealed accordingly. Your Austroflamm specialist dealer knows the guidelines and will be happy to advise you. For your own safety the connection of the flue pipe must be carried out by a technically competent person.

7.4 Floor load-bearing capacity

Before installing, verify whether the load-bearing capacity of the substructure can withstand the weight of your Austroflamm stove.

With regards to loading capacity, for floors with underfloor heating we refer you to your structural engineer responsible for statical calculations, builder, etc.

7.5 Floor condition

Austroflamm stoves can be placed directly on the floor.

The fire protection regulations for operating a wood-burning or pellet stove vary depending upon the location and appliance. We recommend you obtain this information from your chimney sweep or the specialist dealer in your area.

7.6 Room of installation

Note that the room in which the stove is installed must have at least one door / one window leading to the outside, or be directly connected to such a room. For balanced flue operation, other heating appliances and extractor hoods must not be operated together with this heating appliance as part of the room air system.

8 Fuel material/-quantity

8.1 Fuel

Wood

Many of our native types of wood can, after being appropriately dried, be burnt CO2-neutral in heat-producing appliances. Wood stands out because it grows again, can be sustainably harvested, requires little or no extra external energy to be invested in the fuel, and has a short journey from the producer to the consumer, which provides an optimal climate balance.

The most common types of wood to use in the stove are beech, yoke elm, birch, larch, spruce and pine. The most important criterion for burning in a heat-producing appliance is that the fuel has been sufficiently dried through. For this purpose the prepared pieces of firewood should be stored for at least two years. The legislator stipulates a maximum water content of 20%. That is still however a lot of water sitting in the capillaries of the wood. A piece of firewood only becomes good when its water content comes to a maximum of 12 to 13%. The differences in combustion behavior are striking and clearly detectable even by the layman.

Types of wood other than the ones referred to above are also suitable for burning. However each heat-producing appliance should be checked for how their use affects combustion behavior. Oak for example burns with a rather shorter flame and more embers. Oakwood catches fire with greater difficulty, and due to hardness of the wood it is not split as well (small) as other types of wood, which again has a negative effect on combustion behavior. It is however a good energy source, and, correctly processed, also suitable as firewood.

Softwoods (fir, pine, spruce) should if possible be mixed with hardwood. Softwoods have a higher proportion of tannin, which leads to more deposits in the heat-producing appliance, the connecting pipes and the chimney. If only softwood is burnt, this can lead more quickly to a build-up of shining soot. Mixing with hardwood (for example, beechwood) reduces this effect.

The size of your heat-producing appliance's combustion chamber will dictate whether your firewood is 25cm, 33cm or 50cm in length. 50cm pieces of firewood should preferably dry for somewhat longer (lain down for three years or more), because wood is dried out mainly by the leakage of water from the capillaries - and that simply takes time. And the path from inside to outside in a 50cm-long piece of firewood is twice as long as in a 25cm-long piece of firewood. The important thing is that the wood is well split. This means that the circumference of a piece of firewood (once all sides are measured around the cutting point) must be a maximum of 15-25cm. Pieces of wood cut to this size dry more easily - above all, however, they give the fire (the temperature) a greater attack area and thus make it easier to evolve gas and thus to burn. Also the quantity of fuel can be better measured out. Thanks to their outstanding levels of efficiency, modern heat-producing appliances require just a fraction of the amount of wood of earlier stoves. Here smaller pieces of firewood can be placed according to the manufacturer's specifications - large pieces of wood often exceed the maximum specified quantity with just a single piece.

Not everyone has a hygrometer at home for determining the water content in wood, particularly when good reliable units cost several hundred euros. However you can make a good estimate of how suitable your fuel is by carefully observing combustion behavior. A "good" wood fire will only smoke briefly in the ignition phase, hardly at all after that. It will burn with a light (yellow to orange-colored) long flame. Little residue will occur in the combustion chamber, most of it disappearing again when the fire is fully developed. Another good criterion for assessing whether a piece of firewood is suitable for combustion is its weight. Most manufacturers also specify the amount to be laid in kg/weight. Example: a piece of beechwood 33cm in length with a circumference of approx. 20cm weighs approx. 1kg when it is suitable (dry enough) for burning. Therefore 25cm in length gives approx. 750 grammes, and 50 cm in length approx. 1.5kg.

Please observe at all times the maximum specified amount to be laid, even when putting on more wood! Otherwise your fire will not provide the desired efficiency - but above all considerable damage may be caused to your appliance, to gaskets and material and to the flue gas duct.

The wood may only be burnt untreated. NEVER burn treated woods, not even wood processed with natural substances or organic glazes. Wood waste does not belong in the stove!

Wood briquettes

Many people like wood briquettes as a fuel because they require less storage space than wood, can be stocked or sold in small quantities and - at least at first glance - make less work than wood. Within the scope of production, the quality of briquettes is consistent. Wood briquettes do not need to be stored for a long time to be dried out. Due to the raw material (unrefined chips) and the production process they have an already defined residual moisture.

If wood briquettes are designated as a suitable fuel, then this still only applies to this fuel, NOT for coal-, paper-, bark- or other pressed items, such as pellets.

In spite of various standardizations and many advertising promises, there are also considerable differences in quality in wood briquettes. But even with good fuel quality, combustion behavior is different from that of unrefined log. And not every wood briquette burns equally well in every stove. Before you decide on a particular variety and perhaps even store this up in larger quantities, you should extensively test the wood briquettes under various draft conditions. Most suppliers keep "test packages" for this purpose that can be purchased at preferential prices to test out and compare with one another the various types offered.

TIP

When burning wood briquettes, the maximum quantity specified in these instructions must also be observed. The quantity must not be exceeded.

As the wood is pressed and thus has little spatial volume for the same weight, modern heat-producing appliances with a low placement quantity often have "little fire heaps" occur, leading one to wonder whether a fire can burn at all with so little fuel. Nevertheless you must never exceed the maximum placement, because that would cause damage. Many wood briquettes change during the temperature increase when burning, by "opening up". This should not worry you as it is normal. When inserting wood briquettes make sure that this expansion as far as possible does not press not in the direction of the window, as otherwise this will get very dirty.

In principle you should not insert wood briquettes as one piece, but rather break them at the layer thicknesses, which are usually visible in slices, and place smaller pieces in the combustion chamber, not in an interlocking manner, but randomly. This way you will ensure that the combustion air reaches more burning material and flows around it better. Wood briquettes require a stronger air current, an expert eye and perhaps a bit more patience, until you get the knack of it. Since less volume is available (although the same mass, it takes less space up), the fire is generally smaller and does not burn so high and vivaciously as when burning log. When wood briquettes alone are burnt, this therefore generally leads to haziness in the combustion chamber, as well as on the stove window. Not all areas of the combustion chamber have the same temperature applied to them as when unrefined wood is burnt, which is why these deposits occur. It may be that with one variety of wood briquettes more deposits occur, whereas with another variety none at all. This suggests trying out various varieties to determine the suitable fuel for your heat-producing appliance. If you would really like to use wood briquettes, but don't get on quite well with them, then it may also help to mix the fuel. That means: Burn wood briquettes and unrefined log in the mixture ratio that achieves a good burning result for your heat-producing appliance.

Wood briquettes must also be stored dry. In general it can be said that pressed items with a hole in the middle usually burn better. Soft wood briquettes are to be preferred and are often more suitable than hard wood briquettes.

Approved fuel

Dry, properly stored, unrefined log (preferably hard wood) is permitted as fuel for our stoves.

Round wood must be split at least once so that it lights better. The diameter of the split piece of wood must not exceed 7 cm.

Explosive substances

It is strictly forbidden to burn or introduce highly flammable or explosive substances (empty aerosols and the like) into the firebox or to store them in the immediate vicinity of your stove. Risk of explosion!

Fuel

Only burn the recommended fuel.

Clean combustion

The firewood must be dry (rel. wood moisture < 15 %) and untreated. Furthermore the correct quantity of firewood must be burnt in order to achieve a clean, low-emission combustion.

8.2 Fuel quantity

Maximum fuel quantity

Your Austroflamm stove is designed for maximum efficiency: see Technical Data section. Too great a quantity of fuel can lead to overheating and damage to your Austroflamm stove!

Maximum amount of fuel to be deposited for both Heidi Back 2.0 versions: 2.0 kg wood.

NOTICE

Overheating

Too great a quantity of fuel can lead to overheating and damage to your Austroflamm stove

NOTICE

To avoid damage you must **NEVER** operate your Stove a greater quantity of fuel than that specified in this manual!

9 Installation

Installation must only be carried out by an authorized specialist company.

Before installing the stove, check that all movable parts are working. Any defects must be reported before the installation.

In the following sections we will give you information on

- the integration or attachment of appliance parts,
- the rearrangement of the flue pipe connection
- The connection of the combustion air supply, and on
- other important facts relating to the installation.


The protective equipment and tools listed are required for the following work steps

Type of protective equipment	
	Safety gloves
	Safety shoes

Work equipment	Activity
Insulated tools	In order not to damage or scratch the varnish, no sharp objects or tools should be used. Instead insulated tools are used by preference when assembling and disassembling stove parts.
Torx wrench set	Various installation jobs
Allen key set	Various installation jobs
Fork wrench set	Various installation jobs

9.1 Execution

9.1.1 Mounting the hob

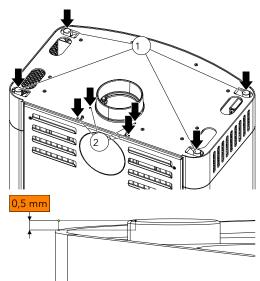

1) Adjust rubber cushions (1) to 0.5 mm.

2) Screw adjusting screws (2) in or out as required.

Fig. 6: Adjusting the rubber cushions

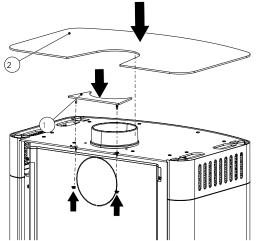


Fig. 7: Attaching the hob




Fig. 8: Transition

- 3) Attach the small hob (1) and fix from below using the nuts.
 - ⇒ Should you have difficulty in fixing the nuts during this stage, remove the side cladding and rear panel from the stove. Proceed as described in the section Removing the side cladding.
- 4) Place the large hob (2) on to the rubber cushions.

- 5) The transition between the small and the large hob must be straight and not show any difference in height.
 - ⇒ If the transition is not straight, adjust the adjusting screws (2) and/or the rubber cushions (1) to the correct height.
- 6) If the side cladding was removed, remount it.

9.1.2 Rearranging the flue pipe connection

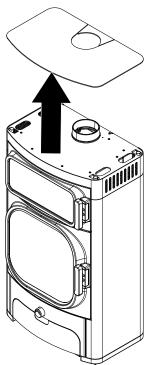


Fig. 9: Removing the hob

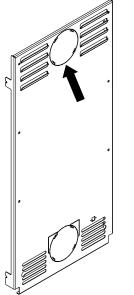


Fig. 10: Removing the perforated cut-out

- 1) First remove the hob.
- 2) Detach side cladding and the rear panel. Proceed as described in the section Removing the side cladding.

3) Use side cutters to remove the perforated cut-out in the rear panel.


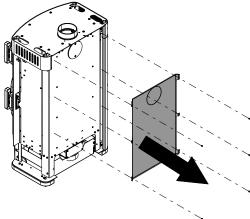


Fig. 11: Detaching the radiation protection

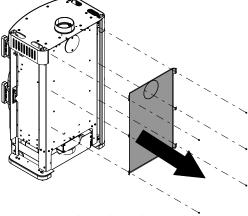

6) Remove cover with seal (1) on the back.

4) Undo the screws and remove the radiation protection

5) Use a saw to remove the perforated cut-out on the ra-

7) Remove bracket with seal (2).

diation protection.

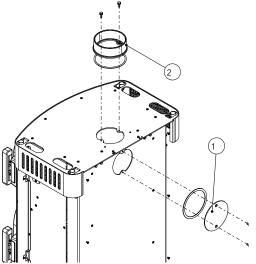


Fig. 12: Remove cover and bracket

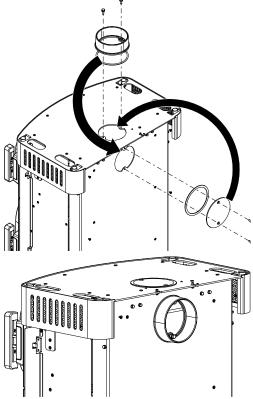


Fig. 13: Replacing cover and bracket

8) Replace parts and reinstall.

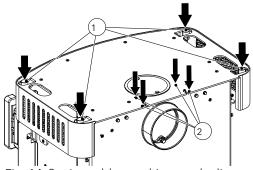


Fig. 14: Setting rubber cushions and adjusting screws




Fig. 15: Rubber cushions (1) to 0.3 mm




Fig. 16: Adjusting screws (2) to 0 mm

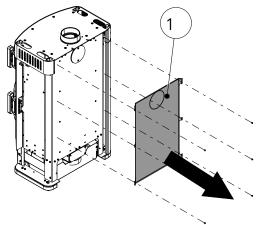


Fig. 17: Mounting the radiation protection

- 9) Adjust rubber cushions (1) to 0.3 mm.
- 10) Completely screw in adjusting screws (2) to 0 mm.

11) Remount radiation protection.

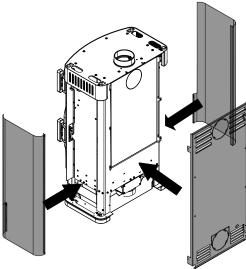




Fig. 18: Mounting the rear panel and side cladding





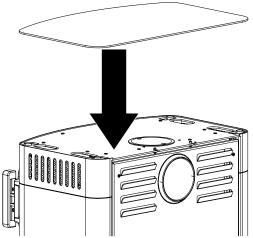


Fig. 19: Attaching the hob

9.1.3 Installing the HMS




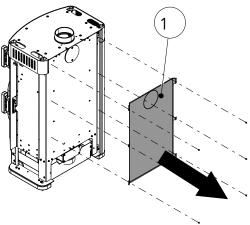


Fig. 20: Removing the radiation protection

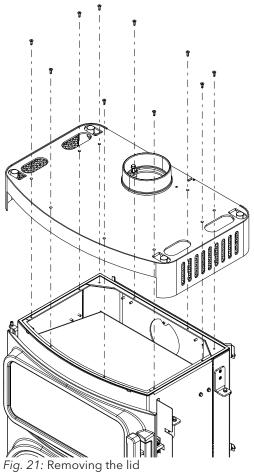

- 2) Undo the screws and remove the radiation protection (1).
 - After the HMS bricks have been installed, the radiation protection is no longer installed.






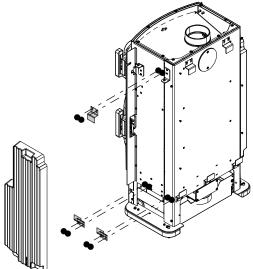


Fig. 22: Mounting HMS holder and HMS

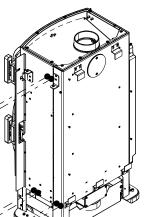

brick

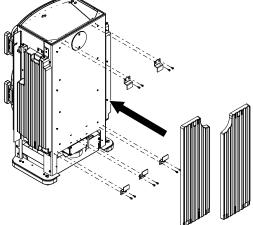


Fig. 23: Mounting HMS brick at the rear

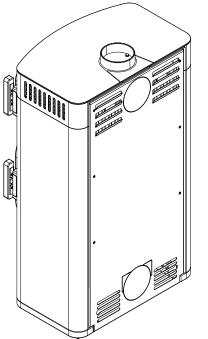


Fig. 24: Attaching side cladding, lid and hob

- 4) First mount the HMS holders on the side.
- 5) Attach the HMS brick to the HMS holder.
- 6) Repeat both steps on the other side of the stove.

7) Mount the HMS holders as shown on the rear of the stove and attach the HMS bricks to the holders.

8) Remount side cladding and lid and attach the hob.

9.1.4 Mounting the Keramott

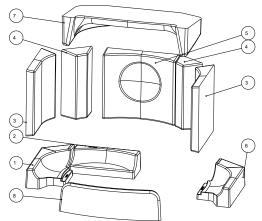


Fig. 25: Keramott firebox

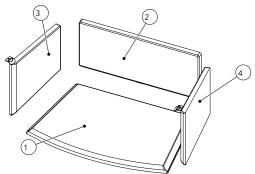


Fig. 26: Keramott baking compartment

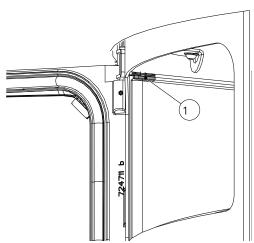


Fig. 27: Holders for Keramott bricks

Numbering = installation sequence

After all Keramott bricks have been laid in the baking compartment at the top, the two side bricks must be secured.

1) Bend the preinstalled holders down by hand to secure the bricks.

9.1.5 Installing the log drawer

NOTICE

If you have installed Air+ or would like to use it, it is not possible to use the log drawer together with Air+.

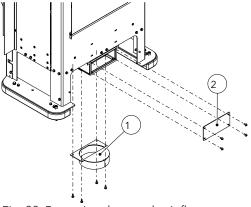


Fig. 28: Removing the supply air flange

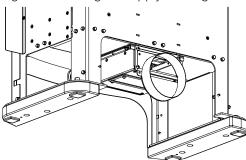


Fig. 29: Parts changed over

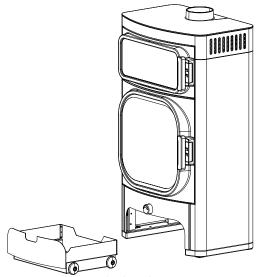


Fig. 30: Inserting the log drawer

- 1) First the side cladding and the rear panel must be detached. Proceed as described in the section Removing the side cladding.
- 2) Remove supply air flange (1).
 - ⇒ With the log drawer appliance part, the supply air flange can be converted to the rear. If this is not desired, then as a consequence it will not be required and can be removed.
- 3) Remove side part (2) and if necessary mount the supply air flange (1) in this location.
- 4) Mount the side part (2) below in the place of the supply air flange.

- 5) Reattach side cladding, rear panel, lid and hob.
- 6) The log drawer can now be inserted.

9.1.6 Removing the front trim

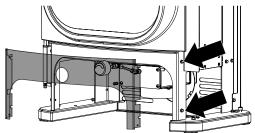


Fig. 31: Detaching the trim

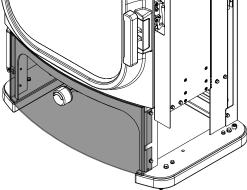


Fig. 32: Fix new trim.

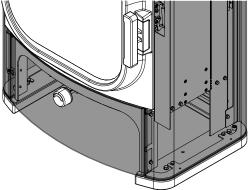


Fig. 33: Mounting the side cladding

- 1) The side cladding must be removed. Proceed as described in the section Removing the side cladding [> on page 57].
- 2) Loosen left and right screws and remove trim.

3) Attach new trim to the stove and fix with the loosened screws.

4) Remount side cladding.

10 Air+ installation and operation

10.1 Removing the rotary control unit

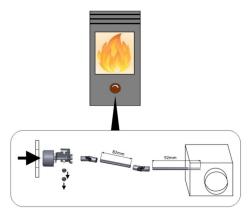


Fig. 34: Remove rotary control unit

1) Please remove both hexagonal nuts and take the rotary control incl. the complete rod system (82 mm and 92 mm) out of the air box. Both rods will be replaced by new ones.

10.2 Attaching the firebox temperature sensor


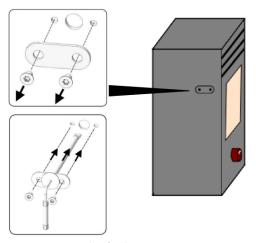


Fig. 35: Fixing the firebox temperature sensor

- 1) In order to be able to install the firebox temperature sensor, firstly the left side part of the stove must be removed.
- 2) Then the temperature sensor with the sensor sleeve can be mounted instead of the cover plate.

10.3 Converting the rotary control unit

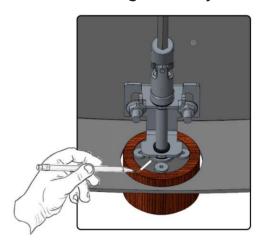

NOTICE

Before dismounting, mark the position of the wooden handle as shown in the illustration.

- Dismount the rotary control unit, as shown in the picture below.
- 2) Remove the shim.
- 3) Then reassemble the rotary control unit.

NOTICE

The grub screw must be removed in order to be able to dismount the rotary control unit. Afterwards the grub screw must be reinstalled.


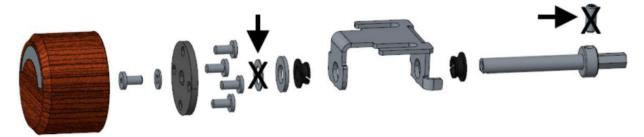


Fig. 36: Rotary control unit conversion

10.4 Installing the control unit

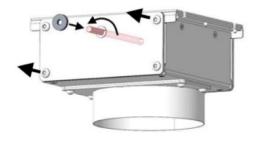

1) Insert the 125 mm hexagon rod supplied into the air box and turn fully counterclockwise.


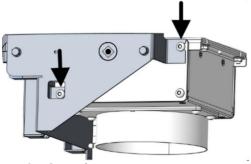


Fig. 37: Control unit


- 2) Then slide the magnetic driving plate onto the hex rod.
- 3) Now slide the preassembled unit (motor incl. controls) on to the hex rod and fix the unit on to the air box using the two Torx screws shown, which must be removed beforehand.
- 4) Then mount both the universal cardan joints included in the set and the rotary control unit.
 - ⇒ Ensure that the rotary control unit is in the position shown above before mounting.
- 5) Then fix the screws on the cardan joints with the rod system!

10.5 Installing the DC plug

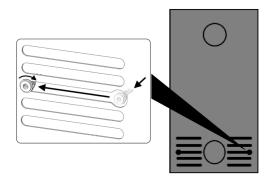

1) Guide the power cable with plug through the rear panel and fasten it as per the picture.


10.6 Electrical connection of the controls

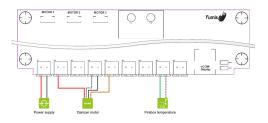



- Make sure that all the components are correctly connected.
- 2) Plug the mains cable plug into the electrical point. Test the air control system and set the minimum and maximum motor position calibration process.
- 3) Wait approximately three minutes after the plug has been plugged in and then check whether the air control system (rotary knob) has fully opened and closed by itself again after these three minutes have expired.
- 4) The air control system (rotary knob) should be completely closed again after the calibration process.
- 5) The air control system (rotary knob) did not completely open and close during these three minutes. Therefore check the following:
- Plug correctly connected to the mains.
- Air control system is functioning. Any LED display lights are flashing.
- All components are correctly connected: check whether all connectors are correctly connected.
- Is the temperature scale in the combustion chamber above the ambient temperature? If the stove is warm due to a previous firing process or if the stove is just warming up, this will be detected by the air control system. Therefore the calibration process will be prevented and the air control system will switch straight to combustion phase 1.
- Check the rotary knob. It should be capable of being turned against a slight resistance. Otherwise the rotary knob and all connected components must be checked. Despite the automatic air control system the position of the damper doors can be manually adjusted.

10.7 Mounting the cover

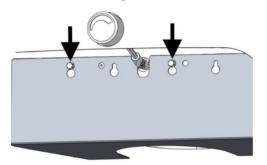

1) Then mount the cover

Fig. 38: Mounting the cover

10.8 How the "AIR+" automatic combustion control works

General

The "AIR+" combustion control only reacts to differences in the firebox temperature. The appropriate information is transmitted from the firebox temperature sensor to the controls. Should the firebox temperature sensor be defective, unplugged or have a fault, the control unit automatically goes into fault mode with pre-programmed control opening and does not change this position until the fault is resolved.

Operation

Operation of the "AIR+" combustion control consists of the following phases:

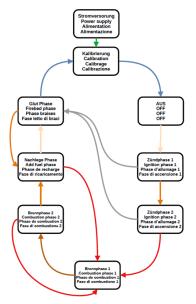


Fig. 39: Phase

Calibration

Calibration of the controls is carried out when the controls are connected to the mains. In doing so, the damper door is completely opened 1x and closed again. If the stove has previously been manually controlled in unpowered operation, then the damper door position is recalibrated when connected to the mains. Should a rise in temperature be detected during calibration, then the stove immediately switches to ignition phase 1.

After each combustion cycle the control system carries out a new calibration. This serves to ensure the correct synchronization between the damper door and the rotary control unit.

Off

In this state the damper doors are closed. In the event of a rise in temperature, the stove switches to ignition phase 1.

Ignition phase 1

The damper doors are completely opened. After about 15 minutes, the switch to ignition phase 2 takes place. If within about 30 minutes no fire is detected, the the control system switches into the ember phase.

Ignition phase 2

The damper doors are not completely opened. After about 5 minutes, the switch to combustion phase 1 takes place. If within about 30 minutes no fire is detected, the the control system switches into the ember phase.

Combustion phase 1

The damper doors are controlled as a function of the firebox temperature.

Combustion phase 2

The damper doors are controlled as a function of the firebox temperature.

Stoking phase

The damper doors are completely opened once more in order to fan the embers for the stoking process. When stoked up with wood, the flame temperature rises and the system switches to combustion phase 1. Otherwise after a certain length of time the system switches to the ember phase.

Ember phase

Damper doors are opened approximately halfway in order to maintain the firebed. If the temperature in the combustion chamber rises above a certain point, the system switches to the stoking phase and then to combustion phase 1. Otherwise the system switches to the OFF phase. Calibration is carried out before positioning into the off phase.

11 Settings

11.1 Door hinges

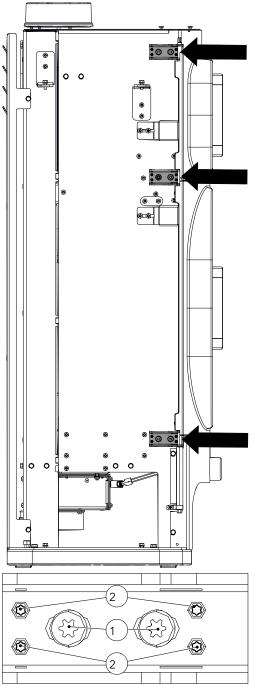


Fig. 40: Adjusting screws

The following steps described apply to the firebox door and the baking compartment door.

- 1) To adjust the door, the hob must be removed and only the left side cladding detached. Proceed as described in the section Removing the side cladding.
- 2) Using the screws (1) the door can be adjusted up, down, left and right.
- 3) Using the grub screws (2) the door can be adjusted in and out.
- 4) After the door has been adjusted, the left side cladding and the hob can be reattached.

11.2 Adjusting the firebox door spring

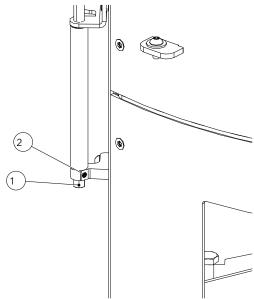


Fig. 41: Adjusting the closing pressure of the door

- To adjust the firebox door spring, the hob must be removed and only the left side cladding detached. Proceed as described in the section Removing the side cladding.
- 2) Hold the screw (1) with the open-ended spanner.
- 3) Loosen the screw (2) with the screwdriver.
- 4) Use the open-ended spanner to turn the screw (1) in the desired direction (tightening or loosening the spring).
- 5) When desired position is reached, tighten the screw (2) with the screwdriver
- 6) Reattach left side cladding and the hob.
- ⇒ Closing pressure is adjusted

11.3 Adjusting the firebox door lock

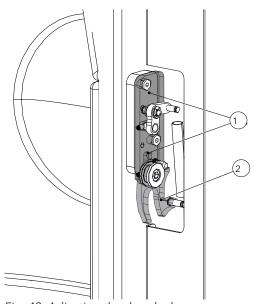


Fig. 42: Adjusting the door lock

- 1) Open door.
- 2) Door lock can be adjusted up, down, forward and backward using the screws (1).
- 3) Ensure that the latch bolt (2) is always in the position shown.

11.4 Adjusting the baking compartment door lock


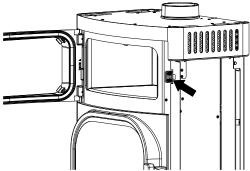


Fig. 43: Adjusting the door lock

1) Using the two nuts the door lock can be adjusted upwards forwards and backwards.

11.5 Ventilation in the baking compartment

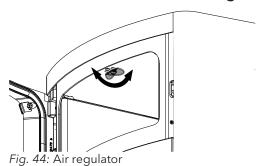

An air regulator is located inside the baking compartment. You can use this air regulator to have the moisture drawn out of the baking compartment.

- 1) Turn the air regulator until three holes are visible. This way the damp air can escape from the baking compartment.
 - ⇒ It is recommended that this air regulator always be kept open when using the baking compartment.

12 Commissioning

12.1 Initial Commissioning

NOTICE

During the initial commissioning and in the following 2-3 combustion cycles, only approx. 2/3 of the maximum fuel quantity is to be used.

NOTICE

To avoid damage you must **NEVER** operate your Stove a greater quantity of fuel than that specified in this manual!

During the first 3-4 combustion cycles at nominal heat output, odors may develop. The odors are caused by the evaporation of sheet metal greases and binding agents from the varnishing. Although unpleasant, these fumes are completely non-toxic. We therefore recommend that you well ventilate the room for the first few fires.

- 1) Remove all enclosed documents and appliance parts from the fireplace.
- 2) Read the operating manual through carefully before the initial commissioning.
 - ⇒ For optimally lighting we refer you to the section Making fire correctly.

Removing the ash box cover

Before the stove is operated for the first time, it is absolutely vital to remove the cover of the ash box from the stove.

Proceed as follows: (for a better understanding, see also steps 1 and 2 in the operating manual in section Emptying the ash box)

- 1) Open the door.
- 2) Raise the grate with the hook supplied with the stove.
- 3) Take off the cover and lift it up.
 - ⇒ Cover is inserted incorrectly when delivered.
 - ⇒ You need the cover when you empty the ash box.
 - \Rightarrow To empty the ash box we refer you to the section Emptying the ash box.

12.2 Balanced Flue Operation

For balanced flue operation, the stove must be fed directly from the outside to the fireplace via an airtight duct with barrier. This way the stove can also be operated in units with mechanical airing or ventilation. This applies to all countries except Germany. In Germany an additional test is required.

12.3 Baking compartment door

During the initial commissioning, do not completely close the baking compartment door, in order that the residual moisture can escape from the Keramott.

13 Operation

13.1 Before heating up

The stove can only function properly if there is sufficient combustion air coming to the room of installation (the appliance), specially if several firing installations are being operated at the same time. Ensure sufficient air supply before heating up. Open the combustion air flap on the stove and keep it open for the entire combustion period.

Devices for the supply of combustion air must not be modified.

13.2 Making fire correctly

To ensure the stove operates correctly and safely, it is important that the chimney generates the required draft. This must be checked in particular for each initial commissioning (e.g. after summertime) and in the transitional periods (e.g. when the wind is strong). If there is insufficient required draft, then paper or softwood chips can first be burnt in order to bring stove and chimney flue to temperature.

The air inlet of the stove must not be closed.

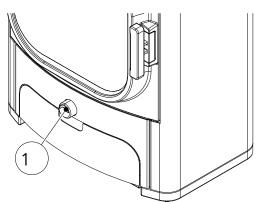


Fig. 45: Primary/secondary air controller



Fig. 46: Before kindling

- 1) Clean grate.
- 2) If necessary empty ash box/ash pan (beware of embers).
- 3) Completely open the primary/secondary air control (1).
 - ⇒ Position "UP"

- 4) Lay 2-3 pieces of log (1) (beech, oak, birch) across the bottom of the firebox.
- 5) Finely split softwood above it (2).
- 6) Place a firelighter (3) in the middle and light it.
 - ⇒ Never use petrol, spirit or similar for ignition!

1	Log
2	Softwood
3	Firelighter

ΕN

- 7) Close the door.
 - ⇒ It is best to allow the first layer of wood to combust without altering the air damper setting.
 - ⇒ If only the bed of embers is left (no more flames), you can place another layer of log.
- 8) When stoking up, proceed as for heating up:
 - ⇒ Open combustion air supply.
 - ⇒ Carefully open stove door.
 - ⇒ Put wood on.
 - ⇒ Close door.
- 9) As soon as the pieces of firewood are burning well all around (light, high flames), you can control the air supply with the controller.
 - ⇒ Control at maximum setting right = maximum heat output (open).
 - ⇒ the flames should always burn yellow and never blue or with black flame tips (otherwise feed more air in).

blue = too much air black = too little air

During combustion doe not totally close the air supply (danger of deflagration!).



Fig. 47: Flame pattern

13.3 Heating in the transition period

In the transition period, i.e. during high external temperatures, a sudden temperature rise can disrupt the chimney draft so that the fuel gases are not completely drawn off. In this case the appliance must be filled with smaller quantities of fuel and operated with the air damper/-controller on a higher setting so that the available fuel combusts more quickly (with a flame developing) and the chimney draft stabilized as a result.

TIP

To prevent resistance in the firebed, the ashes should be removed more frequently.

14 Maintenance

Have the maintenance carried out by an Austroflamm dealer or an Austroflamm service engineer.

15 Cleaning

15.1 Cleaning the stove, flue gas ducts and flue pipe

The stove, the flue gas ducts and flues should be annually - possible even more often, e.g.

ΕN

- after the chimney has been cleaned
- checked for deposits and
- cleaned as necessary.

TIP

The chimney must likewise be regularly cleaned by the chimney sweeper. Your master chimney sweep will inform you of the necessary intervals. The stove should be inspected annually by a specialist

NOTICE

Carry out any cleaning work while the stove is in the cold state.

15.2 Cleaning flue gas paths

- 1) Remove chimney pipes.
- 2) Brush or vacuum soot and dust in the stove and chimney pipes
- 3) Open the door.
- 4) Remove the upper Keramott and clean and vacuum the flue gas passages from the inside.
- 5) Carefully remove the hob.

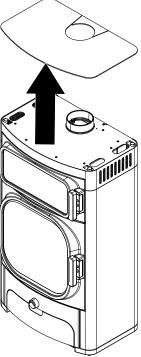


Fig. 48: Removing the hob


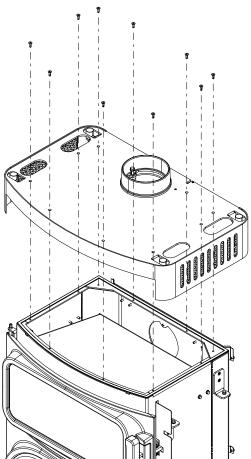


Fig. 49: Removing the lid

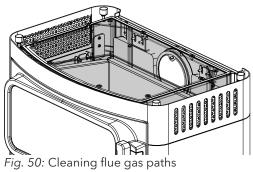

6) Undo all the screws from the lid and remove the lid.

7) Clean flue gas paths with a vacuum cleaner.


15.3 Emptying the ash box

- On a regular basis and in good time (at least 1 x per week) remove the ashes from the firebox and empty the ash box.
 - If the firebox is not regularly cleaned of ash then there is a danger that the combustion air openings become blocked and the appliance suffers damage.

To empty the ash box, proceed as follows:

NOTICE

Be aware when emptying the ash box that there might be embers in the ash box. Only remove the ash box when the stove is in the cold state.

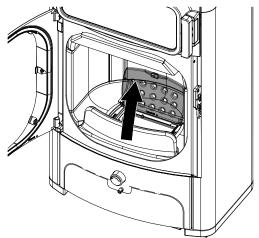

- 1) Open door.
- 2) Raise the grate with the attached hook.

Fig. 51: Raising the grate

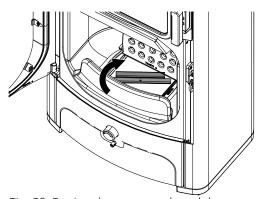


Fig. 52: Putting the cover on the ash box

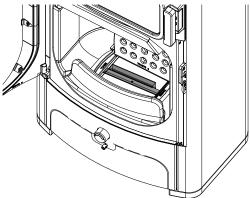


Fig. 53: Closing the cover

- 3) Take the supplied cover and use it to cover the ash box.
- 4) Turn the handle of the cover clockwise until the handle engages.

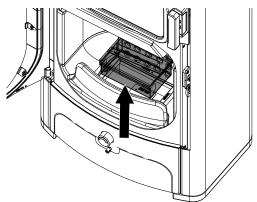


Fig. 54: Removing and emptying the ash box

- 5) Remove the ash box from the stove and empty it.
- 6) Reinsert the ash box after emptying it.
- 7) Close the grate again.

15.4 Cleaning the door window

Spray window with glass cleaner and leave it for a moment to take effect.

- We recommend cleaning the glass with our Austroflamm glass cleaner or a commercially available window cleaner.
- Prevent door- or window seals from coming into contact with water or cleaner, since these will otherwise harden and in doing so lose their function. Only intact seals ensure that your stove functions flawlessly.

15.5 Cleaning surfaces

- Varnished surfaces may only be cleaned with a soft cloth (if necessary damp).
- Soak up dissolved dirt with absorbent cloths or household paper.
- For stainless steel surfaces there are also special cleaners.

16 Help

Problem	Cause	Solution
The glass window is sooty	Insufficient draft	from time to time (depending on use) the window must be cleaned with glass cleaner
		Clarification with chimney sweeper (poss extend chimney/measure draft)
	incorrect operation of the air regulator	It is imperative that the air regulator is operated in accordance with the instructions (if secondary air is closed too far, the glass pane will become sooty very quickly)
	excessively large pieces of log	Comply with quantity and size ac-
	log too damp	cording to the instructions
	Operating temperature has not been reached	Use more fuel, dry wood (< 15 % residual moisture), pay attention to air regulation
The chimney is too small	The chimney draft is insufficient	Ask your chimney sweep to carry out a draft measurement
	Exhaust ducts and combustion chamber sooted up	Use more fuel, dry wood (< 15 % residual moisture), pay attention to air regulation
The stove emits a strong odor and smokes externally	Stove-enameling phase of the var- nish	During the first heating cycles, the varnish hardens and smells in the process
	The stove surface is dusty/soiled	Keep the surfaces of the stove clean
		Keep the floor area clean around the stove
Flue gas escapes when stoking up and during the heating phase	Chimney draft too low, flue pipe connection leaky	Check connection points and if necessary reseal
		Check chimney draft
	Door opened before combusted down to embers	Only stoke up when only embers are present (no more visible flames)
The fire is too weak and/or goes out	Air regulator closed (-)	Air regulator open (+)
	Wood too damp	Are you using dry wood (< 15 % residual moisture)?
	External temperature too high (>15 °C)	
The room is not warm enough	Convection air grille closed	Open convection air grille
	Chimney draft too high	Clarification with chimney sweeper (poss shorten chimney/measure draft)
The fire burns down too quickly and uncontrollably	Air regulator open (+)	Throttle combustion air supply after the operating temperature has been reached in the firebox (+ / -)
	Seals worn	Check whether the seals on the inside of the door are continuous and in working order, if necessary replace
	Firebox door not closed properly	Close the firebox door
	Chimney draft too high	Clarification with chimney sweeper (poss shorten chimney/measure draft)
Ceramic windows become sooty very quickly	Unsuitable wood used	Use dry unrefined wood. See information about this in the Fuel section

Problem	Cause	Solution
	Operating temperature not reached	Bring stove to the operating temperature
		Sooting up of the window after 8-10 hours of fires is normal
	Chimney draft too low	Contact chimney sweep

16.1 Firebox lining

The lining of your stove consists of Keramott, a high-quality material with special combustion properties and an attractive appearance. During or after operation this lining may have superficial hairline cracks, which do not however affect functioning. Replacement of such parts is not required!

16.2 What to do in the event of a chimney fire

If fuel used is incorrect or too moist, then due to deposits in the chimney this may lead to a chimney fire.

- 1) Call the fire department and the district master chimney sweep!
- 2) Close the combustion air.
- 3) Enable access to the cleaning openings (e.g. basement and attic).
- 4) Remove all flammable material from the chimney.
- 5) Inform your district master chimney sweeper before recommissioning of your stove and have your chimney checked for any damage.

16.3 What to do in the event of faults

Should faults occur, your dealer will require the following details:

- Serial number and appliance model as per the nameplate
- Original invoice (date of sale)

17 Accessories

Have defective parts (accessories, spare parts) replaced by your specialist stove dealer. This guarantees that stove is and remains safe and functional.

Baking compartment

The design is a fully functional baking compartment.


This baking compartment is heated from 4 sides (left, right, back and bottom).


TIP

To achieve the most even possible cooking process, halfway through the cooking time you should turn the food being cooked.

The temperature in the baking compartment is regulated via the quantity of wood and the air controller. You can see the current temperature on the baking compartment thermometer (accessory).

The inside of the baking compartment is cleaned in the same way as other parts of the stove. Avoid greasy fumes, as these are difficult to clean.

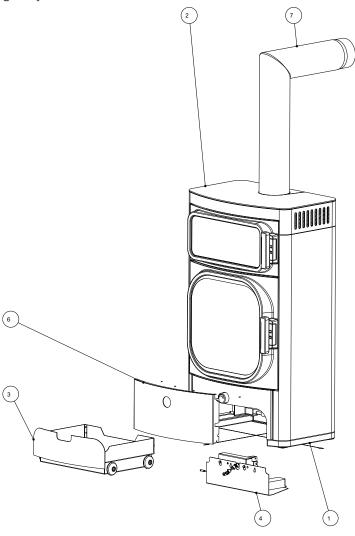

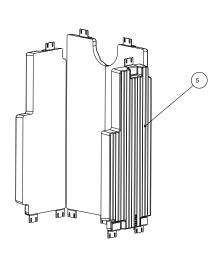

Item no.	Quantity	Article	Article no.
1	1	Heidi Back 2.0	076101
2	1	Hob AO	076105
3	1	Log drawer complete	076002
4	1	AIR+	076003
5	1	HMS, complete	076004
6	1	Front	076008-29
7	1	Elbow piece 130 - set	620066
8	1	Wall distance drawing	
9	4	Base plate	718791

18 Spare parts

Spare parts can be ordered through our dealers.

For ordering spare parts, it is necessary to provide the type plate picture or data from the type plate of your stove. This guarantees proper spare parts for your specific stove.

19 Dismantling

For correct uninstallation and dismantling of the stove, contact your Austroflamm specialist dealer.

19.1 Removing the side cladding

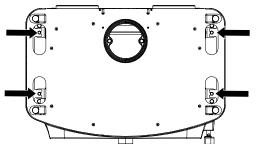


Fig. 55: Undoing the screws from above

1) Undo the marked screws from above.

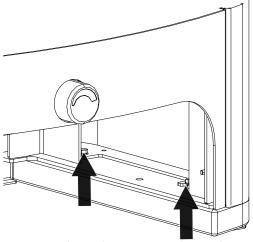


Fig. 56: Undoing the screws on the inside

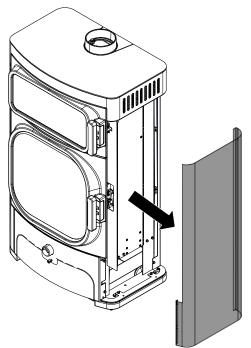


Fig. 57: Detaching the side cladding

2) Undo the screws on the inside at the bottom.

- 3) Detach the side cladding.
- 4) Repeat the last two steps to detach the side cladding on the other side.

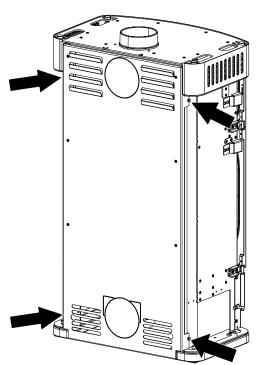


Fig. 58: Undoing the screws on the left and right of the rear panel

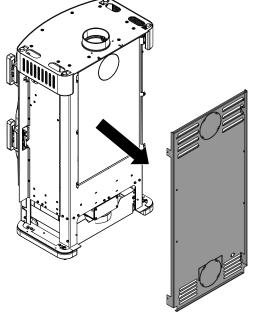


Fig. 59: Detaching the rear panel

5) Undo the screws on the left and right of the rear panel

6) Detach the rear panel.

20 Disposal

NOTICE

To dispose of the stove properly, get in touch with the local (possibly municipal) waste disposal company.

NOTICE

We recommend that you remove those components of the stove which have been in contact with fire such as window, combustion chamber, grates, firebox lining (Keramott), ceramic, sensors and baffle plates and dispose of them in the household waste.

NOTICE

For correct uninstallation and dismantling of the stove, contact your Austroflamm specialist dealer.

Electric and electronic components

Remove the electric and electronic components from the appliance by dismounting them. These components must not be disposed of via non-recyclable waste. Disposal should be carried out professionally via the electrical and electronic waste return system.

Keramott

Remove Keramott components. If present, fastening elements must be removed beforehand. Keramott components that have been in contact with fire or flue gas must be disposed of. Reuse or recycling is not possible. Local disposal options must be observed.

Steel sheet

Disassemble steel-sheet components of the appliance by mechanical crushing. If present, remove seals beforehand. Dispose of steel sheet parts as metal scrap. Local disposal options must be observed.

Cast iron

Disassemble cast-iron components of the appliance by unscrewing or flexing them from one another, or alternatively by mechanical crushing. If present, remove seals beforehand. Dispose of the cast-iron parts as metal scrap. Local disposal options must be observed.

Natural stone

Mechanically remove any natural stone present from the appliance and dispose of it as construction waste. Local disposal options must be observed.

Fittings etc. (for water-carrying appliances)

Disassemble the components for carrying water by unscrewing and removing them and dispose of them as metal scrap. Local disposal options must be observed.

Seals (glass fibre)

Mechanically remove the seals from the appliance. These components must not be disposed of via non-recyclable waste as glass fibre waste cannot be destroyed through burning. Dispose of seals as glass- and ceramic fibre waste (artificial mineral fibres (AMF)). Local disposal options must be observed.

Handles and decorative elements made of metal

If present, disassemble or remove handles and decorative elements made of metal and dispose of as metal scrap. Local disposal options must be observed.

21 Guarantee / warranty

1) Warranty statement: For your AUSTROFLAMM stove, we guarantee the flawless performance of the body for six years, and of all other steel and cast iron components for two years from the date of first sale.

Steel and cast-iron parts that manifest material- and or processing defects during the guarantee period (warranty case) will be replaced for new parts provided that the warranty case has been asserted to the best of the holder's knowledge within the statutory warranty period. Functional problems with electronic accessories (e.g. AIR+ SmartSpot) shall only justify a warranty claim for the particular accessory.

Our warranty only covers the free delivery of the new parts: work- and travel times are not recorded.

2) **Exceptions:** We do not provide a guarantee on wear parts (e.g. Keramott, seals), surface coatings, varnish, glass and ceramics. In the case of such defects no warranty case has occurred.

When heating up, during operation and when cooling down, your stove may produce some noise (crackling, soft clicking, etc.). This is caused by the various materials expanding and contracting under the influence of temperature in your stove. Noise of this kind does not constitute a warranty claim and do not constitute a warranty claim.

The territorial scope of validity of our guarantee covers Austria and Germany. In all other countries, separate conditions of the importer apply to the respective country.

No warranty case occurs if your Austroflamm stove is not located within the territorial scope of validity, which does not change if it is transported or dispatched by Austroflamm."

3) Requirements: A warranty case shall only then be replaceable if your Austroflamm stove has been operated, maintained, installed and commissioned by a specialist authorized by Austroflamm, all in compliance with the user handbook. For the replaceability of the warranty case the start-up log must be received by Austroflamm within one month at the latest of the initial commissioning. In order to make a claim on the warranty, repairs to your stove must only be carried out by a service engineer authorized by Austroflamm.

The warranty claim is asserted with the invoice and serial number with the Austroflamm specialist dealer via whom the purchase was made. An unjustified warranty claim will be charged back to you.

4) **Guarantee:** This guarantee does not affect your statutory warranty rights towards us. Should your Austroflamm stove already be defective at the point of handover, you can always connect us within the framework of the statutory warrant regardless of whether there is a warranty claim or the guarantee is claimed.

22 Start up log

Operator / Customer		Dealer / Engineer	
Name		Company	
Street		Street	
Town and postal code		Town and postal code	
Telephone		Telephone	
Email		Email	
Stove	Working	Comments	
Model			

Stove	Working	Comments
Model		
Serial number		
Technology		
Visuals		
Accessories		

On-site conditions	
Type of chimney [] brick [] stainless steel [] firebrick	Flue pipe diameter:
Chimney diameter:	Draft: Actual value: Target value: >12 Pa
Chimney height:	Outside temperature during draft measurement:
Chimney flue - Approved by chimney sweep []yes[]no	External air supply conduit [] yes [] no
Controlled living space ventilation [] yes [] no	Length:

Instructions for Operator / Customer		
Instructions for handling the appliance explained clearly and comprehensibly	Appliance test heated together with the custom	er
Guarantee conditions and warranty	Cleaning and maintenance interval explained	
explained		
[] glove [] user instructions handed over		

The customer confirms that the stove has been handed over in a fully functional state and free of defects.					
Place, date	Signature Operator / Customer	Signature Technician			

23 Service Report

Date	Technicians	Notes	Work carried out, replacement parts installed

Date	Technicians	Notes	Work carried out, replacement parts installed

Notizen / notes / appunti / remarques					

AUSTROFLAMM GMBH Austroflamm-Platz 1 A- 4631 Krenglbach

Tel: +43 (0) 7249 / 46 443 www.austroflamm.com info@austroflamm.com

